



# 2024 SmartWay Barge Carrier Partner Tool: User Guide

**U.S. Version 1.0  
(Data Year 2023)**

**EPA-420-B-24-010 | February 2024 | SmartWay Transport Partnership | [epa.gov/smartway](https://epa.gov/smartway)**



# **2024 SmartWay Barge Carrier Partner Tool:**

# **User Guide**

**U.S. Version 1.0  
(Data Year 2023)**

Transportation and Climate Division  
Office of Transportation and Air Quality  
U.S. Environmental Protection Agency

**EPA-420-B-24-010  
February 2024**

# Table of Contents

<b>PRE-CHECKLIST — BEFORE GETTING STARTED</b> .....	<b>5</b>
What is the SmartWay Transport Partnership?.....	5
Why Do Barge Companies Join The SmartWay Transport Partnership?.....	5
How do Barge Companies Join the SmartWay Transport Partnership?.....	6
How do I join if My Parent Company Has Multiple Fleets?.....	7
What Data Do I need to Gather to Complete the Barge Carrier Tool?.....	7
What Software & Hardware Is Required For Completing The Barge Carrier Tool?.....	8
How do I set the Security Level When Opening SmartWay Tools?.....	9
What is Included in the SmartWay Carrier Partnership Agreement?.....	11
What’s New in the 2024 Barge Tool?.....	13
<b>DATA COLLECTION REQUIREMENTS</b> .....	<b>14</b>
Establishing Your Data Collection Year.....	14
Required Data.....	14
<b>TOOL SCREENS AND DATA ENTRY</b> .....	<b>15</b>
Downloading the SmartWay Barge Carrier Tool.....	15
How to Set Security Levels For The SmartWay Tools.....	15
Introductory Screens.....	15
Step 1: Entering Partner Name.....	15
Step 2: Company and Contact Information.....	16
Step 3: Fleet Description(s).....	18
Step 4: Selecting a Fleet for Data Entry.....	22
Submitting Your Tool to EPA.....	28
<b>RESULTS AND SUMMARY REPORTS</b> .....	<b>30</b>
<b>APPENDIX A: WORKSHEETS FOR DATA COLLECTION</b> .....	<b>A-1</b>
Worksheet #1: Contact Information.....	A-1
Worksheet #2: Fleet Characterization.....	A-3
Worksheet #3a: Geographic Operation Areas.....	A-4
Worksheet #3B: Tug/Tow Characteristics.....	A-5
Worksheet #4: Vessel Operations.....	A-6
Worksheet #5: Barge Operations.....	A-7

# List of Figures







Figure 1. Macro Settings Screen in the Trust Center.....	11
Figure 2. Pop-up to Verify Fleet Name(s).....	19
Figure 3. Fleet Description(s) - Fleet Details Screen.....	20
Figure 4. Fleet Description(s) - Fleet Cargo Screen.....	21
Figure 5. Geographic Operation Areas Screen.....	22
Figure 6. Tug/Tow Characteristics Screen.....	23
Figure 7. Vessel Operations Screen .....	25
Figure 8. Barge Operations Screen .....	27
Figure 9. View Your Data Reports Screen.....	30

# Pre-Checklist — Before Getting Started




## WHAT IS THE SMARTWAY TRANSPORT PARTNERSHIP?

Launched in 2003, the SmartWay Transport Partnership is a public/private collaboration between the EPA and the freight industry to improve fuel efficiency, increase environmental performance, and encourage supply chain sustainability.

Six types of freight transport companies can join SmartWay.

-  Freight shippers
-  Logistics companies (including 3PLs/4PLs<sup>1</sup>)
-  Truck carriers
-  Rail carriers
-  Barge carriers
-  Air carriers

Tools are provided for each of the six freight transport company types. The SmartWay Tools:

-  Assess freight operations
-  Calculate carbon dioxide (CO<sub>2</sub>), nitrogen oxide (NO<sub>x</sub>), Particulate Matter (PM), and Black Carbon (BC) emissions, and
-  Allow partners to track fuel-efficiency and emissions reductions.

SmartWay ranks Partners' efficiency and environmental performance based on the information reported in the tools and recognizes superior performance through the SmartWay Excellence Awards and the SmartWay High Performers list.

## WHY DO BARGE COMPANIES JOIN THE SMARTWAY TRANSPORT PARTNERSHIP?

The SmartWay Transport Partnership provides Barge Carriers with ways to reduce the environmental impact of their freight operations and address costs. Designed with and for the freight sector, the SmartWay Transport Partnership delivers solutions to marketplace needs and challenges. With access to the latest in EPA-tested technologies and peer-provided success stories, carriers that join the SmartWay Transport

---





<sup>1</sup> 3PLs/4PLs Third party logistics/fourth-party logistics companies.

Partnership can gain a better understanding of their environmental footprint and assert their corporate leadership.

Additionally, SmartWay Partners are associated with an internationally recognized and respected brand that symbolizes cleaner, more efficient transportation choices.

Shippers that join SmartWay move significant amounts of freight with SmartWay Carriers. The higher efficiency of SmartWay carriers compared to non-SmartWay carriers gives SmartWay Barge Carriers an opportunity to improve corporate freight efficiency, reduce their carbon footprint, and voluntarily advance freight sustainability for themselves and their customers.

Participation in SmartWay helps SmartWay Barge Carrier Partners

-  identify opportunities to improve efficiency
-  demonstrate efficiency to customers and stakeholders
-  evaluate and compare carrier performance, and
-  determine the company's transportation carbon footprint

SmartWay provides Barge Carriers with free Tools that help assess and compare various freight transportation options with detailed reports and analyses that support better business decision making.





## HOW DO BARGE COMPANIES JOIN THE SMARTWAY TRANSPORT PARTNERSHIP?

Barge companies join SmartWay by submitting a SmartWay Barge Carrier Tool (hereafter known as the "Barge Carrier Tool" or "Barge Tool.")

Barge companies that join the SmartWay Transport Partnership are known as "SmartWay Barge Partners."

When a barge carrier submits a Barge Carrier Tool to EPA, they agree to the requirements stipulated in the SmartWay Barge Carrier Partnership Agreement--notably, that they will measure and report the emissions performance of their company annually and provide supporting documentation to EPA upon request.

All SmartWay Barge Partners agree to complete and submit the SmartWay Barge Tool to:

-  define fleet composition;
-  characterize fleet activity;
-  individually benchmark multiple fleets; and
-  track annual changes in performance.

Upon approval of a Barge Tool submission, marine companies will be identified as SmartWay Barge Partners on EPA's website on the "SmartWay Partner List" and in a database used by freight shippers to identify companies that meet SmartWay's annual requirements. The carrier will also receive information on how to access its current SmartWay Registration Document.

## HOW DO I JOIN IF MY PARENT COMPANY HAS MULTIPLE FLEETS?






Companies that join the SmartWay Partnership should include all of their fleets and vessels in their submission. If a company wishes to list multiple fleets in the Barge Carrier Tool, they should list these fleets as their customers can hire them. Internal fleets invisible to a customer should not be listed separately. Companies will be listed at the Company level in the SmartWay Partner list on the SmartWay website, and each individually defined fleet will appear as a separate entity in the SmartWay Carrier Data file that customers use to identify which fleets they do business with in the Shipper and/or Logistics Tools.







Tugs and tows used only for internal operations, such as moving barges between terminals, should not be listed as separate fleets. Rather, those units' activity should be included along with those of the customer-facing fleet they serve. If these units serve as a distinct internal use fleet whose activity cannot be readily assigned to any one customer-facing fleet, they should be omitted from the tool.

*SmartWay highly recommends developing your list of fleets before beginning your data entry process. Any fleet that a shipper or logistics company could hire directly should be listed as a separate fleet in your Barge Carrier Tool submission. The best strategy is to have a clear idea of how to define your companies before filling out the Tool.*

## WHAT DATA DO I NEED TO GATHER TO COMPLETE THE BARGE CARRIER TOOL?

To participate in SmartWay, barge carriers need to gather the following essential information to complete the Barge Carrier Tool:

-  The official company name EXACTLY as you would like it presented on the EPA website and other EPA communications
-  Company contact information
-  Contact details for your Working Contact (see page **Error! Bookmark not defined.** for definition)
-  Contact details for an Executive, Sustainability and/or Other Contact(s) (Executive cannot be the same as the Working Contact) (see page **Error! Bookmark not defined.** for definition)
-  Fleet details for all fleets you control:
  - Fleet type (e.g., "Open-water barge" or "River barge")
  - Number of barges and number of tugs
  - Amount of cargo shipped per year by commodity category

-  Geographic areas of operation
-  Tug/tow characteristics:
  - Vessel names and vessel types, U.S. Coast Guard number
  - Number of engines and model/last rebuild year
  - Power units (horsepower or kilowatts) and fuel type
  - EPA engine category and total rated propulsion power
  - Retrofit information
-  Vessel operations:
  - Annual fuel usage and fuel type
  - Towing capacity
  - Annual hours of operation for propulsion engines
  - Auxiliary engine information
-  Barge operations:
  - Number of barges by barge type and size
  - Average volume utilization
  - Annual loaded and empty miles per barge
  - Average loaded payload per barge
  - Total fleet activity
-  Data sources
-  SmartWay ID number (if this is not your first tool submission)


This data should be provided for all of your company's fleets. This data reflects the amount of freight carried by each carrier, the distance that freight is carried, and the fuel consumed to carry the freight.

## WHAT SOFTWARE & HARDWARE IS REQUIRED FOR COMPLETING THE BARGE CARRIER TOOL?





The Barge Carrier Tool was designed in Microsoft Excel using forms and Visual Basic for Applications (VBA) macros and code. Completing the Barge Carrier Tool requires the following software and system requirements:



## Supported Operating Systems

-  Microsoft Windows 10 or later
  - Includes Windows 10, Windows 11, and later
  - The Tool should also be compatible with older versions of Windows if all other requirements are met as well. However, Windows 8.1 and older have reached end of support from Microsoft and this may affect tool performance.

## System Requirements

-  IBM Pentium processor or greater
-  2 GB Ram
-  100 MB disk space
-  Monitor display setting of 1,024 x 768 or greater

## Software Requirements

-  Microsoft Excel 2016 or later
  - Includes Excel 2016 and Excel in Office 365
  - Must be the one-time purchase version of Microsoft Excel installed on a PC or the Office 365 subscription **desktop version** of the application; **cannot run with Microsoft Excel online or through OneDrive online**
  - The Tool should also be compatible with older versions of Excel if all other requirements are met as well. However, Excel 2013 and older have reached end of support and Microsoft no longer provides technical support, bug fixes, or security fixes. This may affect tool performance.
  - ☐ Please download the tool and save it to your desktop or a location on your hard drive if your desktop is in the cloud. The tool will not run if saved to the cloud or certain other locations.



Please check with the user guides for your computer, online support, or your company's IT department to make sure your system is set up to use the Barge Carrier Tool.

## HOW DO I SET THE SECURITY LEVEL WHEN OPENING SMARTWAY TOOLS?

Since the Tool employs macros, Excel macros must be enabled to use the Tool. If necessary, follow the directions on the first screen of the Tool to enable macros, follow directions provided on the Microsoft Support website:

<https://support.office.com/en-us/article/Enable-or-disable-macos-in-Office-files-12B036FD-D140-4E74-B45E-16FED1A7E5C6>, or follow the directions below:

## Macros must be enabled on your computer to use the Barge Tool.

-  The default macro security setting in Excel is "Disable all macros with notification."
-  When you open the tool, you may get a security alert that macros are present, and you need to choose to enable the macros for this file to work. The steps below describe how to enable macros for different versions of Excel, first if the message bar or security dialog appear, and alternatively in the Trust Center if the message/dialog do not appear.



### Enable macros when the Message Bar appears

1. When you open the tool, the yellow message bar appears with a shield icon and the **Enable Content** button.



2. On the **Message** Bar, click **Enable Content**.

**Note:** if the file opens in Protected View, click **Enable Editing** on the message bar. If there is no Enable Editing option, click **for more details** and then click **Edit Anyway**. The Protected View message will look similar to the image below:

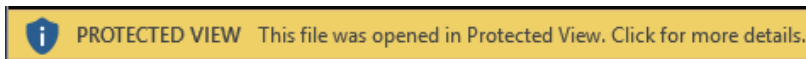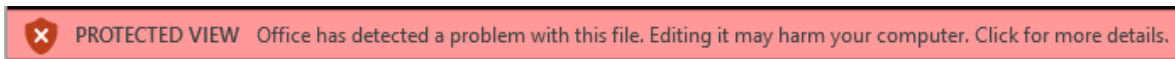

Once editing is enabled, follow Steps 1 and 2 above to enable content on the macro message bar.

### If the Message Bar or Security Options dialog does not appear, change macro settings in the Trust Center

#### Change macro settings in the Trust Center

1. Click the **File** tab
2. Click **Options**
3. Click **Trust Center**, and then click **Trust Center** Settings.
4. In the Trust Center, click Macro Settings.
5. Click the option "Disable all macros with notification."
6. Click **OK**.
7. Close out of the Excel file and then re-open it.

8. Follow the previous instructions to Enable macros when the Message Bar or Security Options dialog appears

The following image is the **Macro Settings** area of the Trust Center.

**Figure 1. Macro Settings Screen in the Trust Center**



Once macros are enabled (and you are not in Protected View), you should be able to proceed with running the Tool.

**If the Tool does not open at this point, review the “Software and Hardware Requirements.”** If you cannot determine how to correct the problem after reviewing this section, contact your SmartWay Partner Account Manager.

## **WHAT IS INCLUDED IN THE SMARTWAY CARRIER PARTNERSHIP AGREEMENT?**

To join the SmartWay Transport Partnership as a barge company, you must agree to the language on the “Partnership Annual Agreement for Carriers.” When you begin working within the Tool, you will be asked to check a box stating that you agree to the terms of the Partnership Annual Agreement. **This agreement must be renewed annually.**

Please review this language with the appropriate personnel within your organization before completing or submitting a Carrier Tool to EPA.

## Partnership Agreement for Carriers

**With this annual agreement, your company joins EPA's SmartWay Transport Partnership and commits to:**

1. Measure and report to EPA, on an annual basis, the emissions performance of your fleet(s) using EPA's SmartWay Carrier Tool(s). Existing fleets will report the 12 months of data for the prior year ending December 31. Newly formed fleets require a minimum of 12 months of operational data.
2. Have your company's name and performance results posted on the SmartWay websites/databases.
3. Upon EPA's request, agree to submit supporting documentation to EPA for any data used to complete the Tool, and agree to submit to an audit of this data.

**In return, EPA commits to:**

1. Promote company participation in the Partnership by posting Partner names on the EPA SmartWay Website and in related educational, promotional, and media materials. EPA will obtain express written consent from the Partner before using the Partner's name other than in the context of increasing public awareness of its participation as described here.
2. Provide companies with industry-wide performance benchmark data as this data becomes available to EPA.
3. Assist Partners in achieving emission and fuel usage reduction goals.

### General Terms

1. Either party can terminate this Agreement at any time without prior notification or penalties or any further obligation.
2. EPA agrees not to comment publicly on the withdrawal of specific partners.
3. EPA reserves the right to suspend or revoke Partner status and terminate this Agreement if the Partner defaults under this Agreement or misuses a SmartWay trademark.
4. The Partner consents to EPA disclosing all information collected in the Tool to the United States Environmental Protection Agency (EPA) and to the contractor responsible for hosting the SmartWay database, for the purposes of administering the SmartWay Program and trademarks only.
5. The Partner understands that this Agreement does not constitute authorization to use the SmartWay trademark, and that such authorization can only be obtained by entering into a separate agreement with the EPA.
6. The Partner agrees that it will not claim or imply that its participation in the SmartWay Transport Partnership constitutes EPA's approval or endorsement of anything other than the Partner's commitment to the program. The Partner will not make statements or imply that EPA, or the United States, endorses the purchase and/or sale of the Partner's products and services or the views of the Partner.
7. The annual submission of this SmartWay Tool constitutes agreement to all terms in this Partnership Agreement.

## WHAT'S NEW IN THE 2024 BARGE TOOL?

1. Miscellaneous text and format updates for clarification.

The following sections describe the information needed and the process for completing the required sections of the Barge Carrier Tool. The **Barge Carrier Tool Technical Documentation**<sup>2</sup> explains more about the data sources and calculation methodology used by the Tool; this guide focuses on the essentials for completing the Tool.

---

<sup>2</sup> You can access the Barge Carrier Tool Technical Documentation through the SmartWay Partner Portal.

# Data Collection Requirements

## ESTABLISHING YOUR DATA COLLECTION YEAR

Before beginning your data collection, identify the last calendar year for which you have full annual (12 months) data. This means that you have data from January of the calendar year through December of the same year. Newly formed fleets require a minimum of 12 months of data. If you do not meet these requirements, please apply once you have the required data.

## REQUIRED DATA

To complete the Barge Carrier Tool, you will need to compile data regarding your fleet(s) characteristics and activity levels. See [above](#) for a complete list of required data.

# Tool Screens and Data Entry

## DOWNLOADING THE SMARTWAY BARGE CARRIER TOOL

To download the SmartWay Barge Tool, visit: <https://www.epa.gov/smartway/smartway-barge-carrier-tools-and-resources>. Save the Tool in a folder on your hard drive; this folder should house copies of your data and future updates.

## HOW TO SET SECURITY LEVELS FOR THE SMARTWAY TOOLS

In some cases, Microsoft Excel will ask you to adjust your security settings before opening the Tool. Instructions should appear on your screen *if* you need to change your security settings before running the Tool.

If you need additional assistance with your security settings, see "[How Do I Set the Security Levels for SmartWay Tools](#)" above.

## INTRODUCTORY SCREENS

Upon opening the Tool, you will see a **Welcome** screen, followed by five screens which orient you to the Tool. The **Assistance for New Users** screen appears first and allows users to access additional screens including Tool selection guidance, data collection needs, Tool help and navigation, and the SmartWay Partner Tool Schedule for the current year. These are general information screens and may be skipped if you are already familiar with the Tool. However, upon proceeding you **MUST** select the box at the bottom of the Partnership Agreement screen, indicating that you agree to the terms of the Partnership Agreement.

## STEP 1: ENTERING PARTNER NAME

Your Partner Name is the official name that your customers would recognize for your company—in other words, the name someone hiring you would look for. Under Step 1 on the **Home** screen:

1. Type your Partner Name EXACTLY as you would like it to appear on the SmartWay website and in other EPA communications in the field as indicated. For example, you may enter:

 ABC Company



 ABC Company, Inc.



Your company will be listed **exactly** as you've entered it here. Therefore, it is important to pay special attention to proper capitalization, abbreviations, annotations, and punctuation.

2. Proceed to Section 2 to enter Contact Information.

## STEP 2: COMPANY AND CONTACT INFORMATION


The SmartWay Tool asks for:

-  **General company information** such as location, web address, phone number, etc.
-  **A Working Contact** for any questions about your company's participation and Tool submissions. The **Working Contact** is the individual designated by the Executive Contact to directly interface with SmartWay regarding specific tasks involved in the timely submission of the Tool. The Working Contact is responsible for coordinating the assembly of information to complete/update fleet data; completing and updating the Tool itself; maintaining direct communication with SmartWay; and keeping interested parties within the company apprised of relevant developments with SmartWay. (NOTE: To ensure that e-mails from SmartWay/EPA are not blocked, new contacts may need to add SmartWay/EPA to their preferred list of trusted sources.)
 

**An Executive Contact:** The **Executive Contact** is the company executive who is responsible for agreeing to the requirements in the SmartWay Partnership Annual Agreement, overseeing the Working Contact (as appropriate), and ensuring the timely submission of the Tool to SmartWay. The Executive Contact also represents the company at awards/recognition events. This person should be a Vice President or higher-level representative for the company.
-  **A Sustainability Contact (optional):** The **Sustainability Contact** is the individual assigned responsibility for monitoring the company's environmental performance. The Sustainability Contact may be the same as the Working or Executive Contact (and specified by checking the "Same as" boxes in the Sustainability Contact section) but cannot be the same as any Other Contact.
-  **Additional contacts (optional):** Additional contacts may include anyone who is not the Working, Executive, or Sustainability contact but may be involved with SmartWay (e.g., press/media contact, fleet manager, etc.).

**Note** that you MUST have at least two contacts listed in the contact information section of the Tool, and the Working and Executive Contacts must be different, in order to proceed. SmartWay recommends developing an internal succession plan to make sure that your Barge Carrier Tool submission schedule is maintained, in the event that a Working Contact is reassigned, or leaves the company for any reason.

Under the **Partner Information** tab:

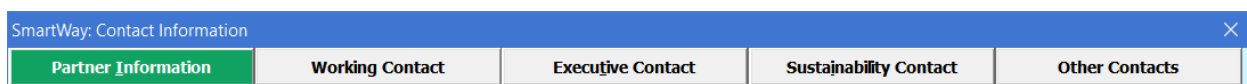


*Note: Use the Tabs at the top of the window to navigate between the 5 information screens*

*Each field marked with an asterisk must be filled out. You will not be able to submit the Tool to SmartWay without this information.*




1. Enter the Company address, phone numbers, and website (optional).
2. Enter the Working Contact name and title.
3. Enter the Executive Contact name and title.
4. Enter the Sustainability Contact name and title (optional).

**Under the Working Contact tab:**

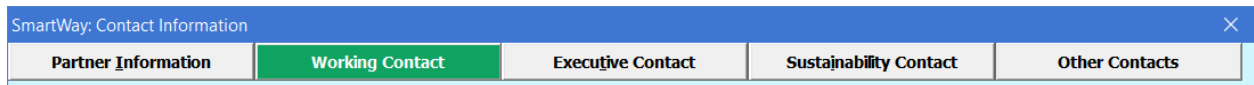


1. Enter the Working Contact information. If the Working Contact shares the same address as the company, you may select the **Use Partner Address** button to auto-populate the address section of this record. Enter the email address twice to confirm its accuracy. When confirmed a ✓ will appear to the right.

**Under the Executive Contact tab:**

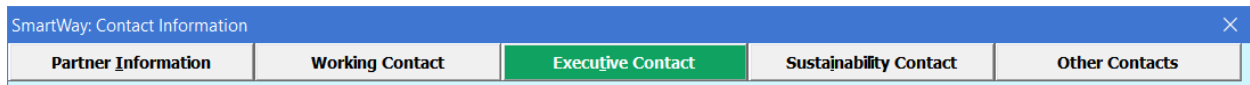


1. Enter the Executive Contact information. If the Executive Contact shares the same address as the company, you may select the **Use Partner Address** button to auto-populate the address section of this record.

**Under the Sustainability Contact tab:**

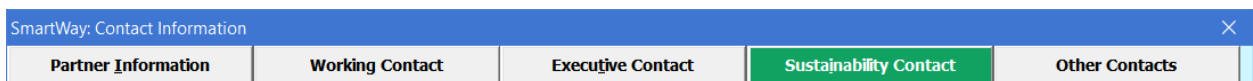

1. Enter the Sustainability Contact information, if applicable. If the Sustainability Contact shares the same address as the company, you may select the **Use Partner Address** button to auto-populate the address section of this record.

**Under the Other Contacts tab:**

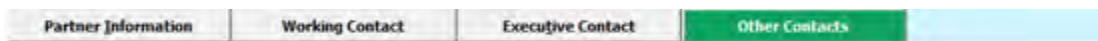

1. Enter Other Contacts (if applicable) by selecting the **Add New Contact** button.
2. Enter the first Other Contact then select **OK** when done.

**NOTE:** You must supply at least two unique contacts on the contact screen to ensure EPA has access to at least two people for Tool submission follow-up.

***NOTE:** In some cases, companies with multiple fleets will gather information from different sources within the company. You may find it useful to have this additional contact information stored within the Tool.*

You can add more contacts to the **Other Contacts** box by repeating this process. If you wish to edit an existing contact's information, highlight the name you wish to edit and then select the **Edit Selected Contact** button. You can remove an existing contact by highlighting the contact and then selecting **Delete Selected Contact**

To make sure you have filled out all required contact information, select **Validate Screen** at the bottom of the screen on the **Partner Information** tab. If any information is missing or invalid, a dialogue box will appear informing you what additional information is required.

Next select the **HOME** button to return to the **Home** screen and go to Step 3.




### STEP 3: FLEET DESCRIPTION(S)

The SmartWay Barge Tool allows you to characterize your freight operations at the fleet level. In the Barge Tool, a fleet is defined as any business unit that a customer has discretion to hire. Most carriers will only need to create one fleet.

If you have multiple fleets that can be hired by customers individually, you should create multiple fleet records in the Tool and characterize their operations individually. You should not include internal company fleet definitions or designations – only separate fleets as they would be identified and hired by your customers.

***SmartWay highly recommends developing your list of fleets offline using a company organization chart or perhaps a customer interface webpage. The best strategy is to have a clear idea of how to define your fleets before filling out the Tool.***


There are three screens in the **Fleet Description(s)** section of the Tool:

-  **Fleet Characterization:** For each fleet that a customer can hire, you will be asked to establish names for each of your fleets. Each Fleet Name will begin with your Partner Name, and will include a Fleet Identifier. Use a Fleet Identifier that is recognizable by your customers.
-  **Fleet Details:** For each fleet, you will provide the fleet type (e.g. "Open-water barge" or "River barge"), total number of barges, total number of tugs, and identify if it an "internal use only" fleet. You will also indicate if your company only maintains harbor tug operations (you do not need to specify number of barges if this is the case).
-  **Fleet Cargo:** You will enter the amount of cargo shipped per year by commodity category and specify the preferred unit for containers (short tons or TEUs).

To complete the **Fleet Characterization** tab:

1. On the **Home** screen, select the **Fleet Description(s)** button to display the **Fleet Descriptions** screens.
2. Confirm that the Partner Name that appears automatically is correct and appropriate for your fleet. If not, make changes in the field under the heading "Partner Name."
3. Enter the "Fleet Identifier" for your first (or only) fleet. This field may be left blank if you only have one fleet. In this case your final Fleet Name will simply be your Partner Name.
4. Enter additional fleets as needed:
  - a. To enter another fleet, select the **Add Another Fleet** button.
  - b. To delete a fleet, select the box next to the row you wish to delete, and then select the **Delete Checked Rows** button.
  - c. Once you have confirmed or modified the Partner Name and specified the Fleet Identifiers, the full Fleet Names will be displayed on the screen to the right, exactly how they will be displayed on the SmartWay website.
5. To proceed, select the **Fleet Details** tab at the top, or select the **NEXT** button at the bottom of the screen.
6. Before moving on, a popup screen will appear asking you to verify that you are satisfied with your fleet name(s).

 **Figure 2. Pop up to Verify Fleet Name(s)**

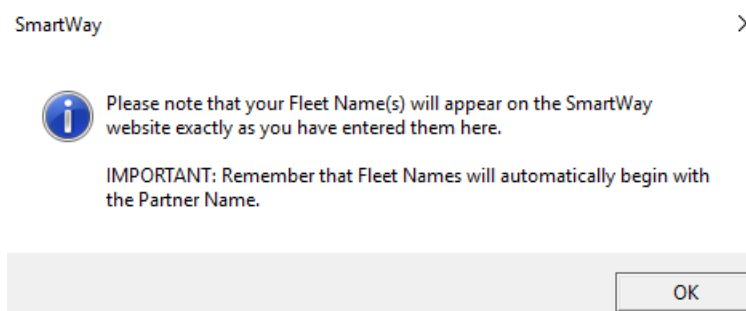

7. Verify that the fleet name(s) show exactly what you want customers to find in the SmartWay website and Carrier Data File.
8. Select **OK** to proceed to the **next** screen. You may return to this screen later to revise your fleet name(s) if necessary.

For each fleet, you will need to specify additional details on the **Fleet Details** tab.

**Figure 3. Fleet Description(s) Fleet Details Screen**

SmartWay Barge: Fleet Description(s) X

**Fleet Characterization** | **Fleet Details** | **Fleet Cargo**

For each fleet specify the type of fleet (open-water barge or river barge), the total number of barges, the total number of tugs for each, and if the fleet is for internal use only. Make sure to report ALL vessels included in your fleet, including those used for hub operations and harbor services, as long as these are freight-related.

Note that the Internal Use Only checkbox should only be checked if that fleet is used exclusively as part of a composite fleet to be submitted by your company in the SmartWay Logistics tool. Checking this box will only allow the "parent" multimodal carrier to see and select this fleet in the Online Logistics Tool. Leaving the box unchecked will allow all users of the Online Logistics Tool to see and select the fleet.

If your company only maintains harbor tug operations (not associated with barge movements), please select the Harbor Craft box below, and specify the total number of tugs.

Harbor Craft

Partner/Fleet Name	Fleet Type	Total Number of Barges	Total Number of Tugs	Internal Use Only?
1: Waterliner Example Transport Co.: Inland Operations	River Barge	100	5	<input type="checkbox"/>
2: Waterliner Example Transport Co.: Gulf Operations	Open-water Barge	90	3	<input type="checkbox"/>

Page B-15


1. **Fleet Type:** Fleet Type is defined as the service type for your fleet. There are two options accepted by the Tool—"Open-water Barge" and "River Barge." If your company has only one fleet, your "Fleet Type" selection will reflect your company's operations as a whole. If there are multiple fleets, each will have its fleet type defined separately.
  - a. **NOTE:** You may also specify "Harbor Craft" as your fleet type by selecting the checkbox on the upper left of the **Fleet Details** screen. Harbor Craft fleets only include power units. Accordingly, the Barge Tool will not allow entry of barge information for these fleets, and associated mileage and volume-related metrics (e.g., grams per ton-mile) are not calculated. Only mass emissions are calculated for Harbor Craft fleets.
  - b. ***In addition, at this time the Barge Tool does not accept "mixed fleets" including Harbor Craft and other barge fleet types. If you wish to submit information on both types of fleets please complete and submit separate Barge Tools.***
2. **Total Number of Barges:** This is the total number of barges used by your fleet in the reporting year. The total number of barges should generally be greater than or equal to the total number of tugs in your fleet.
3. **Total Number of Tugs:** This is the total number of tugs used by your fleet in the reporting year. The total number of tugs should generally be less than or equal to the total number of barges.

4. **Internal Use Only:** For each fleet, check the 'Internal Use Only' checkbox only if this fleet is used exclusively as part of a composite fleet to be submitted by your company in the SmartWay Logistics tool. Checking the box will only allow the "parent" multimodal carrier to see and select this fleet in the Online Logistics Tool. Leaving this box unchecked will allow all users of the Online Logistics Tool to see and select the fleet.
5. Select the **NEXT** button or select the **Fleet Cargo** tab at the top to proceed to the next section.

**NOTE:** For articulated/integrated barges, enter one barge and one tug for each unit.

Next, for each fleet, you will enter the amount of cargo shipped per year by commodity type on the **Fleet Cargo** tab.

**Figure 4. Fleet Description(s) Fleet Cargo Screen**

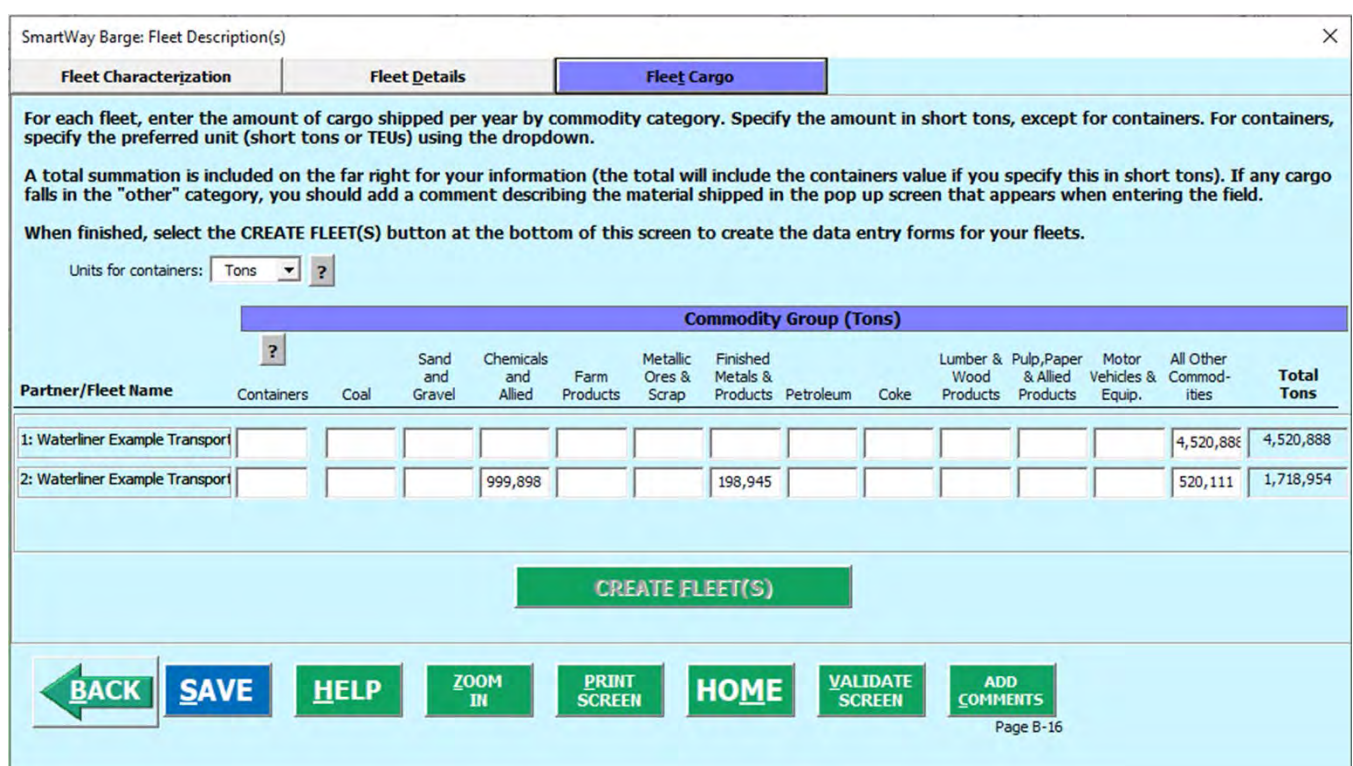

SmartWay Barge: Fleet Description(s) [X]

**Fleet Characterization** | **Fleet Details** | **Fleet Cargo**

For each fleet, enter the amount of cargo shipped per year by commodity category. Specify the amount in short tons, except for containers. For containers, specify the preferred unit (short tons or TEUs) using the dropdown.

A total summation is included on the far right for your information (the total will include the containers value if you specify this in short tons). If any cargo falls in the "other" category, you should add a comment describing the material shipped in the pop up screen that appears when entering the field.

When finished, select the CREATE FLEET(S) button at the bottom of this screen to create the data entry forms for your fleets.

Units for containers: Tons [?] [?]

Partner/Fleet Name	Commodity Group (Tons)											Total Tons		
	Containers	Coal	Sand and Gravel	Chemicals and Allied	Farm Products	Metallic Ores & Scrap	Finished Metals & Products	Petroleum	Coke	Lumber & Wood Products	Pulp, Paper & Allied Products		Motor Vehicles & Equip.	All Other Commodities
1: Waterliner Example Transport													4,520,888	4,520,888
2: Waterliner Example Transport				999,898			198,945						520,111	1,718,954

**CREATE FLEET(S)**

Page B-16

1. For each fleet you will specify the amount of cargo shipped per year by commodity category. Specify the amount in short tons for all commodity categories except for "Containers". For containers, you may choose to enter the amount in short tons or TEUs. Select the preferred unit from the dropdown box provided.
2. Once all fleet information has been input correctly, you may select the **CREATE FLEET(S)** button at the bottom of the page. You will be prompted then to confirm that you have identified all of your

fleets. Return to the **Identify Fleets** screen if needed, otherwise select **OK** and you will automatically be returned to the **Home** screen.


## STEP 4: SELECTING A FLEET FOR DATA ENTRY

1. Using your mouse, on the **Home** screen select and highlight the name of the fleet for which you wish to enter data.
2. Double click the name; you will then be taken to the **Geographic Operations Areas data entry** screen for that fleet.

### Completing the Geographic Operation Areas Screen

You will need to provide the geographic areas of operation for the selected fleet. Areas of Operation are broken out into coastal areas, U.S. navigable waterways, Canadian navigable waterways, and harbors. You are allowed the option of entering "other" areas of operation if necessary.

**Figure 5. Geographic Operation Areas Screen**

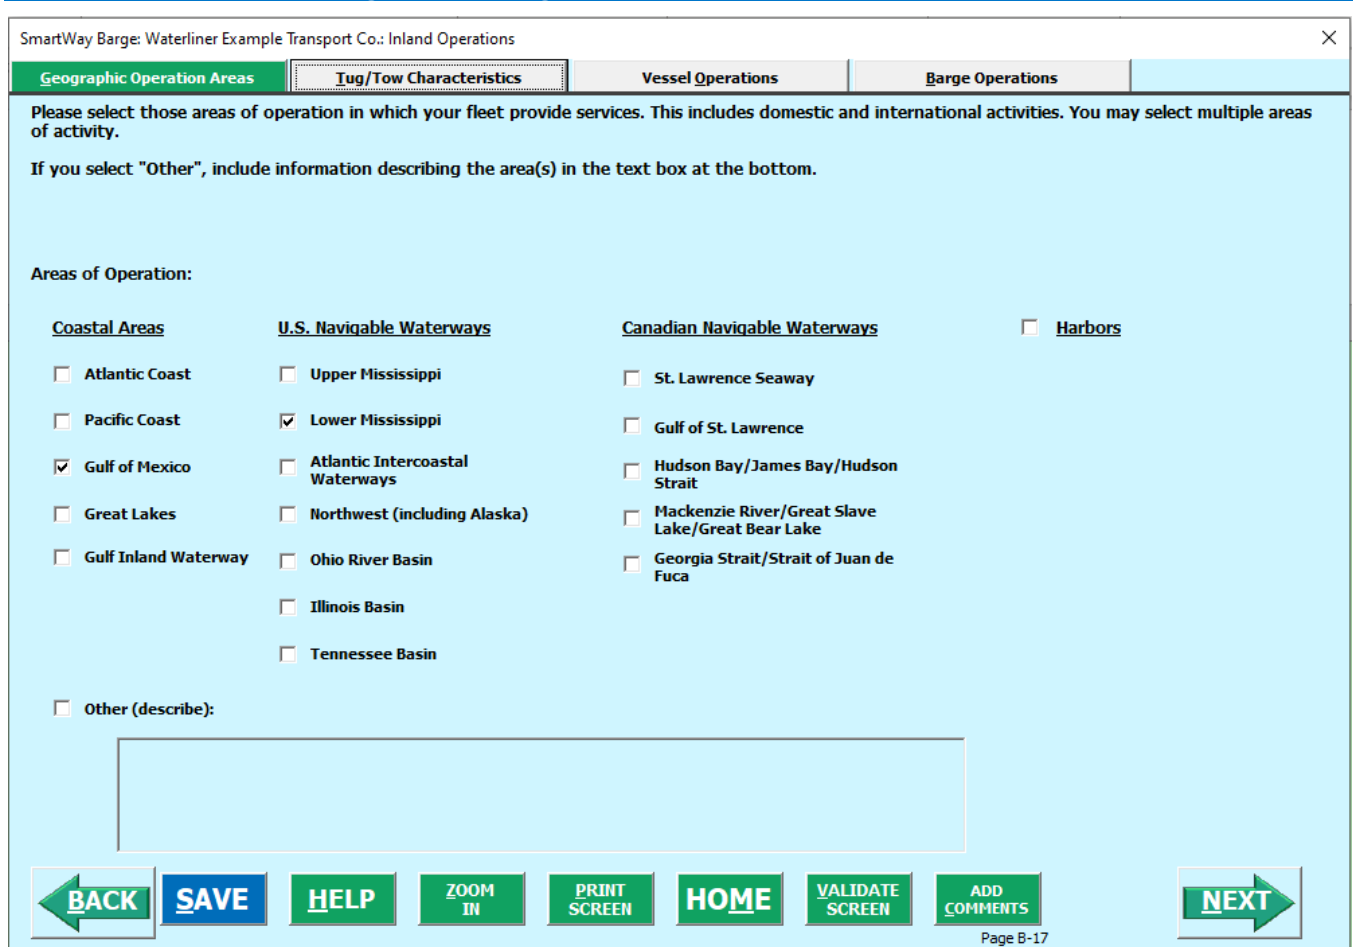

SmartWay Barge: Waterliner Example Transport Co.: Inland Operations

**Geographic Operation Areas** | Tug/Tow Characteristics | Vessel Operations | Barge Operations

Please select those areas of operation in which your fleet provide services. This includes domestic and international activities. You may select multiple areas of activity.

If you select "Other", include information describing the area(s) in the text box at the bottom.

Areas of Operation:

<u>Coastal Areas</u>	<u>U.S. Navigable Waterways</u>	<u>Canadian Navigable Waterways</u>	<input type="checkbox"/> <u>Harbors</u>
<input type="checkbox"/> Atlantic Coast	<input type="checkbox"/> Upper Mississippi	<input type="checkbox"/> St. Lawrence Seaway	
<input type="checkbox"/> Pacific Coast	<input checked="" type="checkbox"/> Lower Mississippi	<input type="checkbox"/> Gulf of St. Lawrence	
<input checked="" type="checkbox"/> Gulf of Mexico	<input type="checkbox"/> Atlantic Intercoastal Waterways	<input type="checkbox"/> Hudson Bay/James Bay/Hudson Strait	
<input type="checkbox"/> Great Lakes	<input type="checkbox"/> Northwest (including Alaska)	<input type="checkbox"/> Mackenzie River/Great Slave Lake/Great Bear Lake	
<input type="checkbox"/> Gulf Inland Waterway	<input type="checkbox"/> Ohio River Basin	<input type="checkbox"/> Georgia Strait/Strait of Juan de Fuca	
	<input type="checkbox"/> Illinois Basin		
	<input type="checkbox"/> Tennessee Basin		

Other (describe):

\_\_\_\_\_

Page B-17

1. Select the checkbox next to each area that your fleet has operations. Check the box next to "other" if you operate in an area not already on the list.
2. If you select "Other," write in a description of the geographic area.
3. Select the **VALIDATE SCREEN** button to make sure you have filled out everything on this screen properly.
4. Select **NEXT** or select the **Tug/Tow Characteristics** tab at the top to proceed.

### Completing the Tug/Tow Characteristics Screen

This screen asks you to provide the vessel-specific information for each tug/tow vessel identified on the **Tug/Tow Characteristics** screen.

**Figure 6. Tug/Tow Characteristics Screen**

SmartWay Barge: Waterliner Example Transport Co.: Inland Operations X

Geographic Operation Areas
Tug/Tow Characteristics
Vessel Operations
Barge Operations

Please provide the vessel-specific information requested in order to uniquely identify each entry. Blank rows have been created for each tug/tow vessel identified on the Fleet Details screen. Specify Vessel Type based on the most common type of operation. All fields require an entry except Coast Guard Number and Retrofit Info.

If you have a large number of vessels to enter you may prefer to use the Import/Export Button to bring in vessel information prepared outside the Tool. Select the Add/Delete Vessel(s) button to add/delete vessels if needed.

Import/Export  
Add/Delete Vessel(s)

	Vessel Name	Vessel Type	Coast Guard Number	Number of Engines	Model Year/ Last Rebuild Year	Power Units	Fuel Type	EPA Engine Category	Total Rated Propulsion Power (all engines)	Retrofit Info
1	Miss Kiowa	Linehaul	1234	2	2011	kW	Diesel (ULS)	2	3,500	<input type="checkbox"/>
2	Miss Illini	Linehaul	2345	2	2010	kW	Diesel (ULS)	2	2,800	<input type="checkbox"/>
3	Miss Kickapoo	Linehaul	3456	2	2005	kW	Diesel (ULS)	2	3,000	<input type="checkbox"/>
4	Miss Sauk	Linehaul	4567	2	1995	kW	Diesel (ULS)	2	3,500	<input checked="" type="checkbox"/>
5	Miss Mascouten	Linehaul	5678	2	1996	kW	Diesel (ULS)	2	2,900	<input checked="" type="checkbox"/>

← BACK
SAVE
HELP
ZOOM IN
PRINT SCREEN
HOME
VALIDATE SCREEN
ADD COMMENTS
NEXT →

Page B-18

1. All fields on this screen require an entry except Coast Guard Number and Retrofit Information. If you have a large number of vessels, to enter, you may prefer to use the Import/Export function to bring vessel information into the Tool prepared outside the Tool. To complete the screen, fill in the following data fields:
  - **Vessel Name:** Enter the unique vessel name.
  - **Vessel Type:** Select the vessel type that best describes the tug. The options are: Linehaul, Locking, Canal, Harbor, Coastwise, and Other. If "Other" is selected, a description must be provided. Specify the vessel type based on the most common type of operation.
  - **Coast Guard Number:** Enter the 6 or 7 digit USCG identification number. This data field is optional.
  - **Number of Engines:** Specify if the vessel has one, two or three propulsion engines. The Tool assumes multiple engines are identical and used in the same way.
  - **Model/Last Rebuild Year:** Enter the engine model year, or if the engine has been rebuilt, the year of the latest rebuild. Model year, or year of last rebuild, ensures that the US EPA engine tier level is correct in emission calculations. If the engine's emission standards reflect an accelerated adoption schedule, you may select the year corresponding to the standard Tier Level introduction. For example, if a 2013 engine meets Tier 3 standards, you may enter 2014.
  - **Power Units:** Enter the units that you are using to specify total rated power. Options are horsepower (HP) or kilowatts (kW).
  - **Fuel Type:** Specify the fuel type, including biodiesel blend percentage if applicable. Fuel type is needed to ensure that the correct emission factors are used and the associated sulfur concentration is correct.
  - **EPA Engine Category:** The engine category is the US EPA level associated with the vessel's propulsion engine(s). The options are Category 1 (less than 7 liters per cylinder) or Category 2 (7 to 30 liters per cylinder).
  - **Total Rated Propulsion Power:** Enter the maximum rated power of the propulsion engine(s). For example, if there are two 2,000 HP engines then enter 4,000 as the total rated propulsion power. The total maximum rating of the propulsion system is needed to calculate horsepower (or kilowatt) hours, which is then applied to the appropriate factors to estimate emissions.
  - **Retrofit Information:** If an engine has been retrofit with an emissions control technology, select this checkbox to quantify the estimated NO<sub>x</sub> and PM emission reduction. On the **Retrofit** screen, select a strategy from the dropdown and provide additional comments if necessary in the space provided. If you select "Other" from the strategy dropdown, enter the NO<sub>x</sub> and PM reduction percent with an explanation in the space provided. Select **OK** to return to the main **Tug/Tow Characteristics** screen.
2. Select **NEXT** or select the **Vessel Operations** tab at the top to proceed.



## Completing the Vessel Operations Screen

On this screen, you will provide vessel-specific operation information, differentiating hours of operation for propulsion engines and auxiliary engines used during the reporting year

**Figure 7. Vessel Operations Screen**

SmartWay Barge: Waterliner Example Transport Co.: Inland Operations

Geographic Operation Areas | Tug/Tow Characteristics | **Vessel Operations** | Barge Operations

Please provide the vessel-specific operation information requested, differentiating hours of operation for propulsion engines and auxiliary engines used during the reporting year. Provide total fuel used across all engines (propulsion and auxiliary).

Indicate the source for your data on this screen in the text box below.

**Data Source(s) for Fuel and Activity Estimates:**  
Company records

Vessel Name	Annual Fuel Usage	Fuel Units	Towing Capacity in Tons (optional)	Propulsion Engines Annual Hours of Operation		Auxiliary Engines
				Underway	Maneuvering	
1 Miss Kiowa	890,002	Gallons		4,709	1,867	Enter Auxiliary Engine Values
2 Miss Illini	712,301	Gallons		3,688	1,134	Enter Auxiliary Engine Values
3 Miss Kickapoo	934,629	Gallons		1,885	821	Enter Auxiliary Engine Values
4 Miss Sauk	812,508	Gallons		4,578	1,912	Enter Auxiliary Engine Values
5 Miss Mascouten	695,420	Gallons		1,427	549	Enter Auxiliary Engine Values

BACK SAVE HELP ZOOM IN PRINT SCREEN HOME VALIDATE SCREEN ADD COMMENTS NEXT

Page B-20

1. To complete this screen, fill in the following data fields:

- **Data Source for Fuel and Activity Estimates:** Indicate the source for your vessel operations data.
- **Annual Fuel Usage and Fuel Units:** Provide the total annual fuel use for each vessel, along with the appropriate units (gallons or tons. Note that if your selected fuel type is LNG, you may only input fuel usage in tons). This information will be used to calculate CO<sub>2</sub>. Include the total fuel used across all engines (propulsion and auxiliary) except for vessels with LNG-powered propulsion engines. For these, you will provide the fuel usage for auxiliary engines separately, as auxiliary engines are assumed to use ultra-low sulfur diesel fuel.

- **Towing Capacity (optional):** Enter the maximum towing capacity per trip for the vessel in short tons. This information is optional and is used to validate the estimated tonnage shipped. Enter the tonnage based on maximum cargo load rather than Bollard Pull – Bollard Pull does not uniquely specify cargo tonnage.
  - **Annual Hours of Operation for Propulsion Engines:** For each mode of use, Underway and Maneuvering, enter the annual hours of operation for the main propulsion engines. Note that this data is for engines used for propulsion, not auxiliary engines. Underway operations are defined as when the power unit is towing a barge configuration, e.g., a 15 barge collection, whereas Maneuvering is defined as movement around ports for fueling or maintenance, or moving individual barges into place to hook up for a haul. Users should provide their best estimate for allocating hours between the two, but this will not currently impact your emission estimates. However, it is important for the sum of these two estimates to equal your total hours of propulsion engine operation.
  - **Auxiliary Engines:** Auxiliary engines are combustion engines used to generate electricity, run winches and cranes, control climate, and run pumps. Engines may be present on either tugs or barges. All auxiliary engines are assumed to be diesel powered. You may enter up to eight (8) auxiliary engines for each vessel. Select the **Enter Auxiliary Engine Values** button to enter data. For each auxiliary engine, check the checkbox to include values, and then provide the following for each auxiliary engine: Manufacture/Model Year, Annual Hours of Use, and the Total Rated Power (HP). Select **OK** to return to the main **Vessel Operations** screen.
2. Select **NEXT** or select the **Barge Operations** tab at the top to proceed.

### Completing the Barge Operations Screen

This screen asks you to provide barge activity information for each barge type/size combination that you operate. The total number of barges in this section must equal the total number of barges entered in the Fleet Characterization section of the Tool.

**Figure 8. Barge Operations Screen**

SmartWay Barge: Waterliner Example Transport Co.: Inland Operations

Geographic Operation Areas | Tug/Tow Characteristics | Vessel Operations | **Barge Operations**

Please provide barge activity information for each barge type/size combination that you operate. Use the scroll bar on the right to see additional type/size combinations. The total number of barges indicated on this form must equal the number you specified in the Fleet Description(s) section of the Tool.

Also enter the total ton-miles, loaded and unloaded barge miles for your fleet as a whole in the cells on the upper right. All miles refer to nautical miles.

**Data Source for Barge Activity:** Planning and Operations Manager data (computerized) crosschecked with Blue Book data

Barge Type	Size	Number of Barges	Average Volume Utilization (Loaded Trips)	Annual Loaded Miles per Barge*	Annual Empty Miles per Barge*	Average Loaded Payload per Barge
<b>Hopper</b>		40				
	150 Feet		%			
	175 Feet		%			
	195 to 200 Feet	40	95 %	7,050	4,002	82
	250 to 300 Feet		%			
<b>Covered Cargo</b>		60				
	150 Feet		%			
	175 Feet		%			
	195 to 200 Feet	60	94 %	6,382	2,941	1,551
	250 to 300 Feet		%			
<b>Tank</b>						
	150 Feet		%			

**Total Fleet Activity**

Total Ton-Miles\*   
 Calculated: 617,032,920 (0% off)

Loaded Barge Miles\*   
 Calculated: 664,920 (1% off)

Unloaded Barge Miles\*   
 Calculated: 336,540 (2% off)

**Calculated Total:**

Total Number of Barges from Fleet Characterization:

Total Number of Barges Talled Here:

Match

\* All miles refer to nautical miles (not statute miles)

Page B-22

1. Indicate the source for your barge operations data at the top of the screen in the **Data Source for Barge Activity** text box.
2. You will need to provide barge activity information for each barge type/size combination that you operate. The total number of barges in this section must equal the total number of barges entered in the Fleet Characterization section of the Tool. Fill in the following data fields to complete this screen:
  - **Barge Type:** Barge Type includes the basic barge configurations typically used to move freight, including hoppers, covered barges, tank barges, deck barges, articulated barges, and other specialty barges. Barge types of "Other" will also require a description and the custom volume in 1,000 cubic feet. Find the section with the barge type you would like to enter data for.
  - **Barge Size:** Barge lengths typically vary from 150 feet to 300 feet. If a barge is <150 feet, enter its information in the 150 feet category. Barge widths also vary, from 28 to 54 feet, although the tool assumes all barges are a standard 35 feet width in order to simplify calculations. Available

barge sizes are 150 feet, 175 feet, 195 to 200 feet, and 250 to 300 feet.<sup>3</sup> In the applicable Barge Type section, find the Barge Size you would like to enter data for, and fill in the following data fields:

- a. **Number of Barges:** Provide the total number of barges of a given type/size combination used in the fleet during the reporting year.
  - b. **Average Volume Utilization (Loaded Trips):** Enter the fraction of available cargo volume typically used for each barge type/size combination during loaded trips. For deck barges, estimate the fraction of available surface area utilized.
  - c. **Annual Loaded Miles Per Barge:** Enter the average number of miles a barge of the given type/size combination typically travels per year while loaded. All miles in the Tool refer to nautical miles (not statute miles).
  - d. **Annual Empty Miles Per Barge:** Enter the average number of miles a barge of the given type/size combination typically travels per year while unloaded. All miles in the Tool refer to nautical miles (not statute miles).
  - e. **Average Loaded Payload Per Barge:** Enter the average payload in short tons for a barge of the given type/size combination, for loaded trips.
3. Next, you will fill in **Total Fleet Activity** as a validation check. Enter the total annual ton-miles, loaded and unloaded barge miles for this fleet. This information will be used to help validate the barge type/size-specific data entries. All miles in the Tool refer to nautical miles (not statute miles). Text that shows difference in calculated activity based on your entries here and by barge type and size will appear so you can see if you need to re-enter data.
  4. Make sure the total number of barges and tugs on this screen match what you entered in the Fleet Description(s) section of the tool.
  5. Select **HOME** to return to proceed through the tool.

## SUBMITTING YOUR TOOL TO EPA

Once you have entered data for each of your barge fleets in Step 4 of the **Home** screen, you may create final submittal files.

1. Select the **Generate a (.xml) data file** which will open a new screen.
2. Select the checkbox to indicate you understand the terms of the SmartWay Partnership Agreement once again.

---

<sup>3</sup> Sizes for articulated barges are expressed in barrels.

3. When ready, select **NEXT** to create a file with the following naming convention: Barge\_PartnerName\_Year\_V0.xml<sup>4</sup>

For example, Barge\_ABCompany\_2023\_V0.xml

where PartnerName is your company's name as entered for Step 1 on the **Home** screen, and Year indicates the year for which you are submitting your data.

4. Next specify the folder where you would like to save the .xml file, and a screen will appear.
5. Follow these instructions for submitting your .xml and .xslm files to SmartWay. Note that the .xml file is approximately 10 times smaller than the .xslm file.
6. Upon selecting **NEXT**, a screen will appear that allows you to close the Barge Carrier Tool or return to the **Home** screen.
  - **NOTE:** DO NOT ZIP the .xslm and .xml files. Send them to EPA as normal files attached in an e-mail. EPA security will not allow zipped files through the EPA firewall.
  - **NOTE:** DO NOT CHANGE THE NAME OF THE XML OR XLS FILES.

**IMPORTANT:** Email servers as well as individual email clients may block or designate incoming email as 'junk mail'. To avoid having SmartWay email blocked or designated as junk email ask your Management Information System staff who manage your email system to place the 'erg.com' domain name on your email system's safe senders list. This is because SmartWay email is currently generated from this domain name and does not match the EPA.gov domain name used by your SmartWay Partner Account Manager. In addition, you should add your Partner Account Manager's email address to your contact list.

Printable data collection worksheets are provided in the Appendix of this document to help you prepare for data entry.

Please visit <https://www.epa.gov/smartway/smartway-barge-carrier-tools-and-resources> for additional resources and technical documentation for more in depth exploration of each section of the Barge Carrier Tool


---

<sup>4</sup> If you create the XML file multiple times the file name will increment each time (e.g., Barge\_ABCompany\_2023\_V1.XML for the second iteration, etc).

# Results and Summary Reports

**View Summary Data Reports** section gives you access to 9 reports to help you understand your data and use it to make better performance decisions. You can access these reports by selecting **View Summary Data Reports** at the bottom of the **Home** screen.

 **Figure 9. View Your Data Reports Screen**

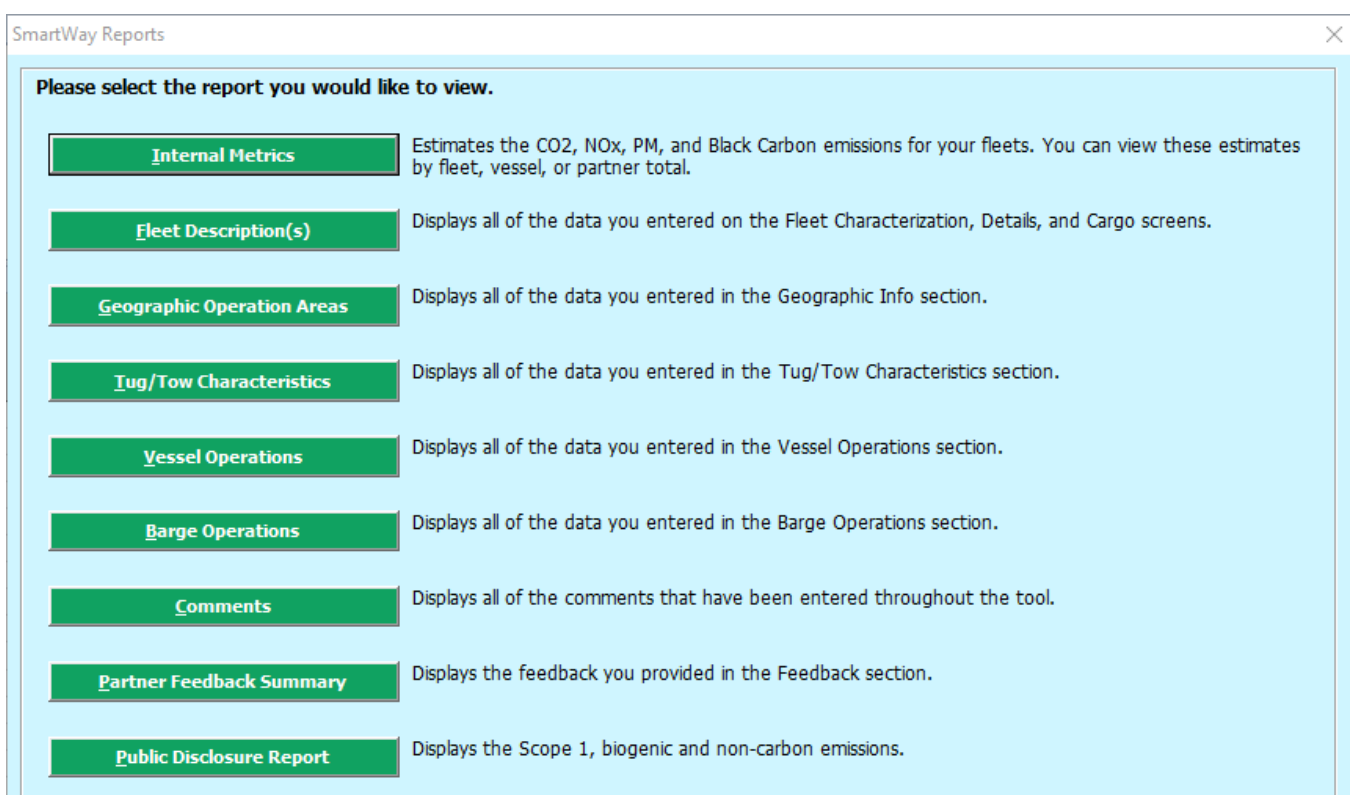

The **Feedback** section allows you to provide EPA with general feedback regarding the SmartWay program. This information is optional and is not required in order to submit your Barge Carrier Tool data to EPA. Selecting the **Give Us Feedback** button under item #5 on the **Home** screen will open this form.

# Appendix A: Worksheets For Data Collection

## WORKSHEET #1: CONTACT INFORMATION

#1. Enter your Contact Information:

### GENERAL COMPANY CONTACT INFORMATION

Company Name							
Headquarters Mailing Address							
City		State/Province		Zip		Country	
Main Phone Number		Toll-free Number		Cell number		Web Address	

### WORKING CONTACT INFORMATION

Working Contact Name							
Working Contact Mailing Address							
City		State/Province		Zip		Country	
Working Contact Phone Number				Email Address			

### EXECUTIVE CONTACT INFORMATION

Executive Contact Name							
Executive Contact Mailing Address							
City		State/Province		Zip		Country	
Executive Contact Phone Number				Email Address			

**SUSTAINABILITY CONTACT INFORMATION**

<b>Sustainability Contact Name</b>							
<b>Sustainability Contact Mailing Address</b>							
<b>City</b>		<b>State/Province</b>		<b>Zip</b>		<b>Country</b>	
<b>Sustainability Contact Phone Number</b>				<b>Email Address</b>			

**OTHER CONTACT INFORMATION**

<b>Other Contact Name</b>							
<b>Other Contact Mailing Address</b>							
<b>City</b>		<b>State/Province</b>		<b>Zip</b>		<b>Country</b>	
<b>Other Contact Phone Number</b>				<b>Email Address</b>			
<b>Contact's role in program</b>							



## WORKSHEET #2: FLEET CHARACTERIZATION

Complete this worksheet for each fleet you will be submitting in the Barge Carrier Tool.

**Specify Fleet Name:** This will be a combination of your Partner Name and a Fleet Identifier you create. Use a Fleet Identifier that a company hiring your fleet would recognize. Enter it exactly as it should appear on the SmartWay website:

Partner Name \_\_\_\_\_

Fleet Identifier \_\_\_\_\_

FLEET TYPE (check one):  Open-water Barge  River Barge  Harbor Craft<sup>5</sup>

Total # Barges: \_\_\_\_\_

Total # Tugs: \_\_\_\_\_

Internal Use Only?:  Yes  No

**Fleet Cargo:** Enter the amount of cargo shipped per year by commodity category. Containers may be entered in units of short tons or TEUs. All other categories must be entered in short tons.

Commodity	Amount	Unit
<b>Containers (select unit):</b>		<input type="checkbox"/> Tons or <input type="checkbox"/> TEUs
<b>Coal:</b>		Tons
<b>Sand &amp; Gravel:</b>		Tons
<b>Chemicals and Allied Products:</b>		Tons
<b>Farm Products:</b>		Tons
<b>Metallic Ores &amp; Scrap:</b>		Tons
<b>Finished Metals &amp; Products:</b>		Tons
<b>Petroleum:</b>		Tons
<b>Coke:</b>		Tons
<b>Lumber &amp; Wood Products:</b>		Tons
<b>Pulp, Paper &amp; Allied Products:</b>		Tons
<b>Motor Vehicles &amp; Equipment:</b>		Tons
<b>All Other Commodities*:</b>		Tons

\*If Other Commodities is selected, please describe type:

\_\_\_\_\_

<sup>5</sup> No barge information associated with Harbor Craft fleets.

## WORKSHEET #3A: GEOGRAPHIC OPERATION AREAS

Complete this worksheet for **each fleet** you will be submitting in the Barge Tool.

### Geographic Operations Areas

Check the area(s) that apply:

- |   |  |
|---|--|
| <input type="checkbox"/> Atlantic Coast                                   | <input type="checkbox"/> Pacific Coast                         |
| <input type="checkbox"/> Gulf of Mexico                                   | <input type="checkbox"/> Great Lakes                           |
| <input type="checkbox"/> Upper Mississippi                                | <input type="checkbox"/> Lower Mississippi                     |
| <input type="checkbox"/> Atlantic Intercoastal Waterways                  | <input type="checkbox"/> Northwest (including Alaska)          |
| <input type="checkbox"/> Ohio River Basin                                 | <input type="checkbox"/> Illinois Basin                        |
| <input type="checkbox"/> Tennessee Basin                                  | <input type="checkbox"/> St. Lawrence Seaway                   |
| <input type="checkbox"/> Gulf of St. Lawrence                             | <input type="checkbox"/> Hudson Bay/James Bay/Hudson Strait    |
| <input type="checkbox"/> Mackenzie River/Great Slave Lake/Great Bear Lake | <input type="checkbox"/> Georgia Strait/Strait of Juan de Fuca |
| <input type="checkbox"/> Harbors  | <input type="checkbox"/> Other*                                |
| <input type="checkbox"/> Gulf Inland Waterway                             |  |

\*If "Other" is selected, please describe type: \_\_\_\_\_

### WORKSHEET #3B: TUG/TOW CHARACTERISTICS

Complete this worksheet for **each vessel** within your fleet.

**Select which vessel type:**

- Linehaul
- Locking
- Canal
- Harbor
- Coastwise
- Other\*

\*If "Other" is selected, please describe the vessel \_\_\_\_\_

Vessel Coast Guard Number (optional) \_\_\_\_\_

Number of propulsion engines (select one):  ONE  TWO  THREE

Engine model year or the year of the last rebuild \_\_\_\_\_

Select which units your total rated power is entered in:  HP or  kW

**Select the engine fuel type:**

- Marine Diesel (Ultra-Low Sulfur)
- Biodiesel
- Liquefied natural Gas

\*If Biodiesel was selected, please provide the biodiesel blend: B\_\_\_\_\_

EPA engine category (select one):  ONE or  TWO

**Total Rated Propulsion Power (HP or kW):** Enter the total rated power for all propulsion engine combined. (Example: Two 2,000 HP engines would have 4,000 HP total rated power.): \_\_\_\_\_

Is there a retrofit on this engine?  Yes or  No

If you answered "Yes" to a retrofit, identify the retrofit (select one):

- Fuel Injection Engine Improvements
- SCR
- Common Rail
- Diesel Electric
- Humid Air Motor (HAM)
- Hybrid Engines
- Diesel Oxidation Catalyst
- Lean NO<sub>x</sub> Catalyst
- Other

\*If "Other" was selected, provide the following information:

NO<sub>x</sub> Reduction %: \_\_\_\_\_ Explanation \_\_\_\_\_

PM Reduction %: \_\_\_\_\_ Explanation \_\_\_\_\_

## WORKSHEET #4: VESSEL OPERATIONS

Describe the data source used to provide the fuel and activity estimates for the vessel operations in this fleet:

---

---

**Complete this portion of the worksheet for each vessel within your fleet.**

Annual Fuel Usage: \_\_\_\_\_ Units (select one):  Gallons or  Tons

Total towing capacity per trip based on maximum cargo load (optional): \_\_\_\_\_ Tons

Annual hours of operation for propulsion engines while *UNDERWAY*: \_\_\_\_\_ Hours/Year

Annual hours of operation for propulsion engines while *MANEUVERING*: \_\_\_\_\_ Hours/Year

Does this vessel have auxiliary engines?  Yes or  No

If you answered "**Yes**" to auxiliary engines, enter the following information for each auxiliary engine (allows up to EIGHT (8) auxiliary engines per vessel). If this vessel uses a propulsion engine powered by LNG, you will also need to provide the amount of annual fuel usage for all auxiliary engines for this vessel. All auxiliary engines for LNG-powered vessels are assumed to use ultra-low sulfur diesel fuel:

Manufacture / Model Year: \_\_\_\_\_

Annual Hours of Use: \_\_\_\_\_

Total Rated Power (HP): \_\_\_\_\_

Annual Diesel (gallons) (applicable only for LNG-powered vessels): \_\_\_\_\_

**NOTE:** To convert kW to HP:  $\text{kW} / 0.7457 = \text{HP}$

## WORKSHEET #5: BARGE OPERATIONS

Complete this worksheet for **each fleet** you will be submitting in the Barge Tool.

Describe the data source used to provide the fuel and activity estimates for the barge operations in this fleet:

---

---

**Use the table below to enter barge activity for each barge type and size combination.** The total number of barges must match the number of barges identified in the fleet characterization worksheet. Required data include:

- **Barge Type and Size:** Enter data for the appropriate barge type and length combination. Barge lengths typically vary from 150 feet to 300 feet. If a barge is < 150 feet, enter its information in the 150 foot category. Articulated barge sizes are expressed in barrels.
- **Total Number of Barges:** Enter the total number of barges of a given type & size combination.
- **Average Volume Utilization (Loaded Trips):** Enter the fraction of available cargo volume typically used for each barge type & size combination during loaded trips. For deck barges, estimate the fraction of available surface area utilized.
- **Annual Loaded Miles per Barge:** Enter the average number of nautical miles a barge of the given type & size combination typically travels per year while loaded.
- **Annual Empty Miles per Barge:** Enter the average number of nautical miles a barge of the given type & size combination typically travels per year while unloaded.
- **Average Loaded Payload per Barge:** Enter the average payload in short tons for a barge of the given type & size combination for loaded trips.

**Enter the Total Fleet Activity:** Once the table for barge activity is complete, enter the total annual ton-miles, loaded and unloaded barge miles for the entire fleet. All miles are in nautical miles.

**Total Ton-Miles:** \_\_\_\_\_

**Loaded Barge Miles:** \_\_\_\_\_

**Unloaded Barge Miles:** \_\_\_\_\_

**NOTE:** To calculate total ton-miles for this fleet, multiply the average loaded payload per barge by the average loaded annual miles per barge and then by the total number of barges. To check your data, divide total ton-miles by total miles. The result is the fleet-average payload. If this number is not reasonable, check your calculations.

Barge Size	Number of Barges	Average Volume Utilization (Loaded Trips)	Annual Loaded Miles per Barge	Annual Empty Miles per Barge	Average Loaded Payload per Barge
<b>Barge Type: HOPPER</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			
<b>Barge Type: COVERED CARGO</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			
<b>Barge Type: TANK</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			
<b>Barge Type: DECK</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			
<b>Barge Type: CONTAINER</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			
<b>Barge Type: ARTICULATED</b>					
< 100K Barrels		%			
100K < 150K Barrels		%			
150K < 200K Barrels		%			
200K+ Barrels		%			
<b>Barge Type: OTHER*</b>					
150 Feet		%			
175 Feet		%			
195 to 200 Feet		%			
250 to 300 Feet		%			

\*If you entered data for "OTHER" barge type, you must also provide the following information.

"OTHER" barge type description: \_\_\_\_\_

Enter the custom barge volume in 1,000 cubic feet for the "OTHER" barges you specified.

Barge Size	Custom Volume in 1,000 Cubic Feet
150 Feet	
175 Feet	
195 to 200 Feet	
250 to 300 Feet	



U. S. Environmental Protection Agency  
Office of Transportation and Air Quality  
1200 Pennsylvania Ave. NW  
Washington, DC 20460  
(734) 214-4333

<https://www.epa.gov>

U. S. Environmental Protection Agency  
National Vehicle and Fuel Emissions Laboratory  
2565 Plymouth Rd.  
Ann Arbor, MI 48105  
(734) 214-4200

<https://www.epa.gov/transportation-air-pollution-and-climate-change>